# **W&O POS Printer Setup**

1.	Star Printer Wifi/Lan, USB and BlueTooth	2
2.	PC-Printer Adapter	4
3.	PC-Printer Adapter with Epson TM-U220	8
4.	ESC/POS Printer Wifi/Lan	12
5.	ESC/POS Printer BlueTooth	15
6.	ESC/POS Printer USB	17
7.	Cash Drawer	19
8.	How to Reserve IP Address	19
9.	Problem & Solution	22

W&O POS supports four kinds of printer connection: 1. Star Printer Wifi/Lan, 2. PC-Printer Adapter, 3. ESC/POS Printer Wifi/Lan, 4. ESC/POS Printer USB. You can choose one of connection which is most suitable for your need. Here are their different and how to setup.


#### 1. STAR PRINTER WIFI/LAN, USB AND BLUETOOTH

W&O POS supports Star Wifi/Lan, USB and Bluetooth thermal printers with model: TSP100, TSP650II, TSP650, TSP700II, TSP800II, SP700, SM-L200 and POP10(mPOP). Here is the guide how to setup Star Wifi/Lan printer. For the setting Star Printer USB, Bluetooth, you can reference to Chapters "ESC/POS PRINTER USB" and "ESC/POS PRINTER BLUETOOTH"


How to setup Star Wifi/Lan Printer connect with W&O POS app.



- 1. Turn on Star Printer.
- 2. In WnO POS printer setting, choose printer connection "Star Printer Wifi/Lan". And click search icon to find printer.

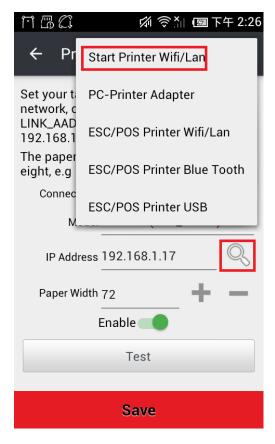

3. Choose printer from the list, setup paper width, and enable the printer.

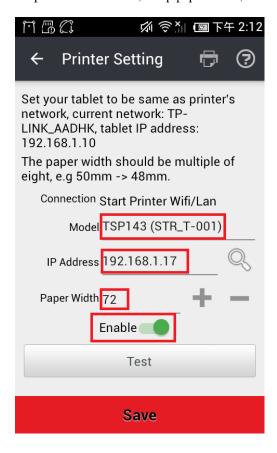

Copyright © 2014 – 2018 Android Application Development Hong Kong

#### 2. PC-PRINTER ADAPTER


W&O POS printer adapter is the most stable and supports all kind of printers. The adapter is installed in windows computer. W&O POS app connect printer through the adapter. The local server version includes PC-Printer adapter, don't need to install and run PC-Printer Adapter.




- Download the zip file from https://drive.google.com/#folders/0BxPQIRLGhJmvc1dXXzhQbnA1STQ
- 2. Unzip "wno-printer-adapter.zip" to c:\ wno-printer-adapter
- 3. Before run the WnOPOS printer adapter, install the printer driver in windows.




4. Double click "wno-printer-adapter.exe"

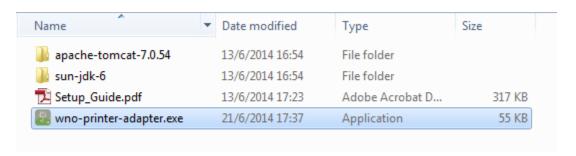


5. Allow firewall for WnOPOS printer adapter port 8080(Allow private network). This step is very important, if you don't see the popup screen, it is better to restart the adapter again.

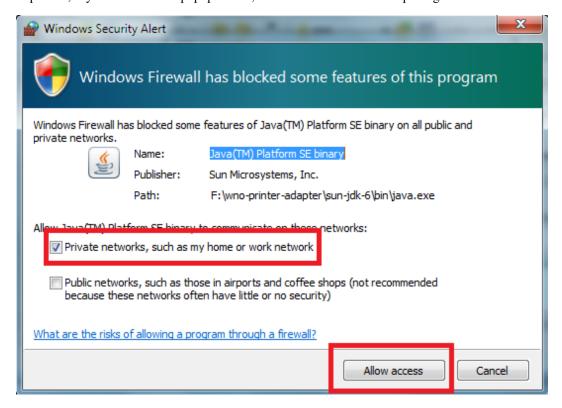

6. Show WnOPOS printer adapter console, make sure the status is running. The IP address and printer name will be used at printer setting in the WnOPOS App. If the status is not running, restart the adapter again.

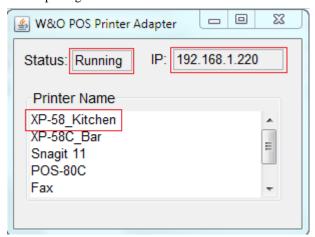

7. In the WnOPOS printer setting, choose "PC-POS Printer Adapter" and click search to find hosting computer IP, then click scan. Choose the printer service from the list.

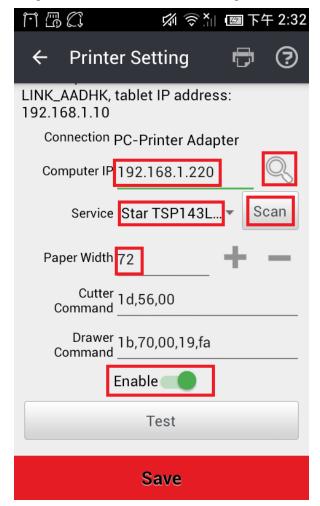

8. After choose printer service, enable the printer, then you can test connection.

9. When printer connection is successful, you can test print.



If you follow the above steps still having problem, please email me. Make sure the printer driver is installed and print correctly from driver.

#### PC-PRINTER ADAPTER WITH EPSON TM-U220


Here is sample of setup PC-Printer Adapter with Epson TM-U220. You can download Epson Advanced Printer Driver and EpsonNet Config Utility from the link http://www.epson.com/cgibin/Store/support/supDetail.jsp?oid=279157&infoType=Downloads&platform=OSF\_W\_8-32

ePOS-Print SDK v15.07.29E +

Advanced Printer Driver v4.56 + 06/12/15 | 85.6 MB | apd\_456ewm.zip

TM Virtual Port Driver v8.30b + 06/12/15 | 13.6 MB | tmvirtualportdriver830b.zip

08/06/15 | 49.2 MB | epos-print\_sdk\_150729e.zip

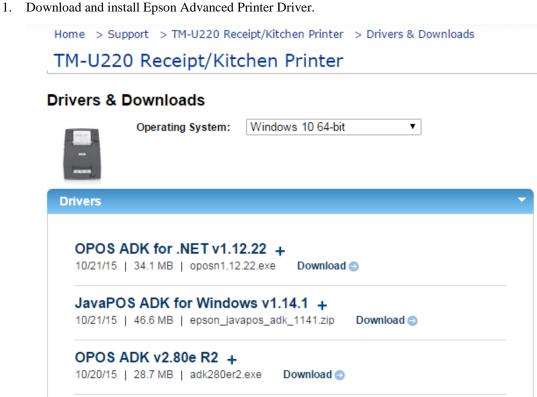

Download

Download


Download

2. If the printer IP is different from your network, you need to change printer IP. Download and install EpsonNet Config Utility.


Home > Support > TM-U220 Receipt/Kitchen Printer > Drivers & Downloads

### TM-U220 Receipt/Kitchen Printer


#### **Drivers & Downloads**

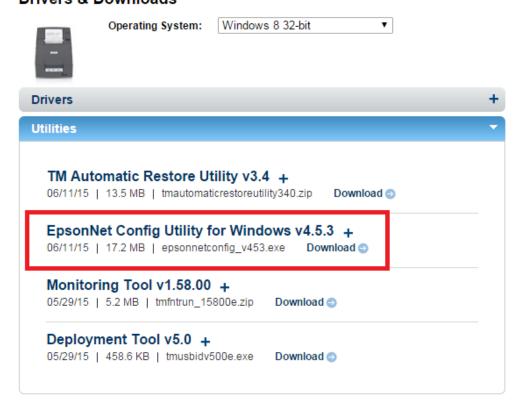


3. Run EpsonNet Config Utility, select the printer and click Configuration

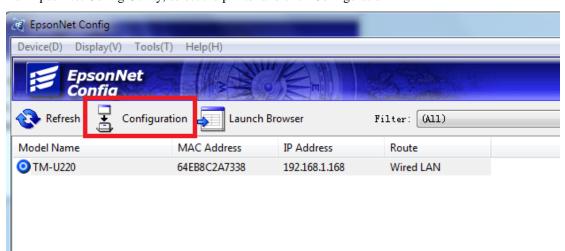


4. Select the TCP/IP, input your new Printer IP and Transmit

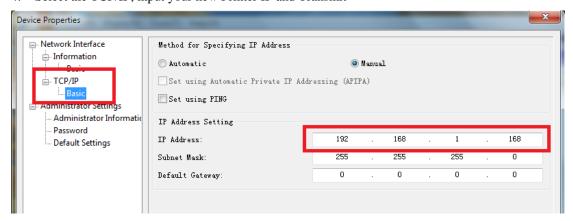


5. After change Printer IP, you need to change Printer Driver IP.

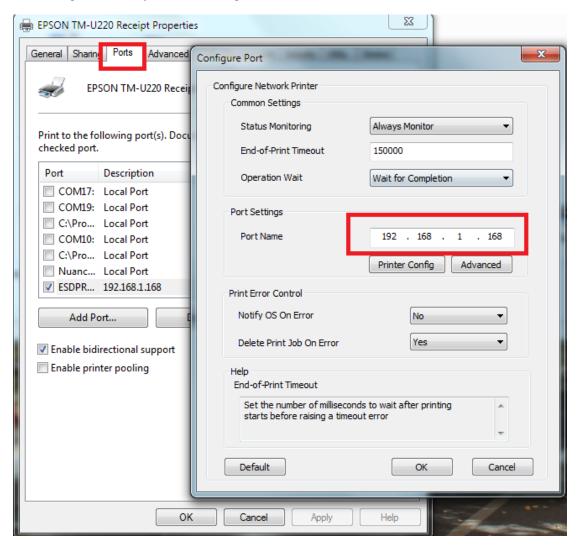

6. You can see the Epson TM-U 220 in the PC-Printer Adapter or in the tablet app.

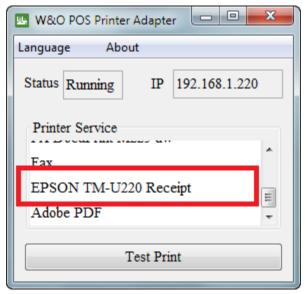

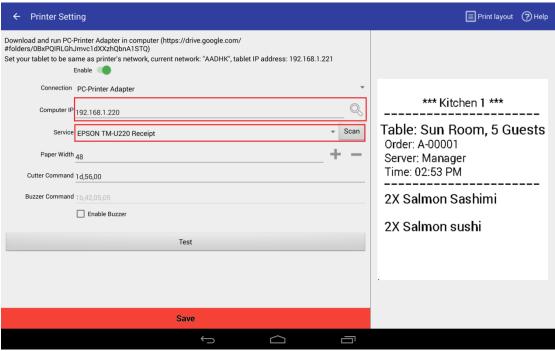


#### 4. ESC/POS PRINTER WIFI/LAN

Wifi connection supports most thermal printers with WIFI/LAN and ESC/POS Command.



1. Setup thermal printer IP by printer manufactory software.

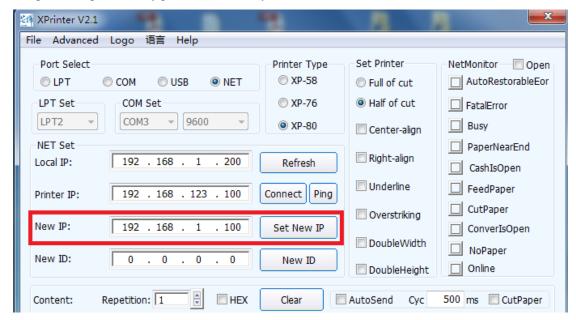

2. Verify printer IP by print out self –test(switch on printer with holding the "FEED" button)

# Selftest.

Vers10n


Speed: 90mm/s
Interface: Ethernet(100M)
Protocols: TCP/IP
EthernetID: 00-DC-7E-67-6D-58
IP address: 192.168.1.228
Netmask: 255.255.255.0
NetGateway: 192.168.1.1
Avoid lost Doc: Off
Default code page: Page0
Print Density: Light

Chinese character: Yes Image NV Download: Yes Modify date : 2012/06/15 3. In WnO POS printer setting, choose printer connection "ESC/POS Printer Wifi/Lan". Click search to find printer IP.




4. Choose printer IP from list or manually input IP. Make sure the tablet and printer are in same network.


The printer default port is 9100.

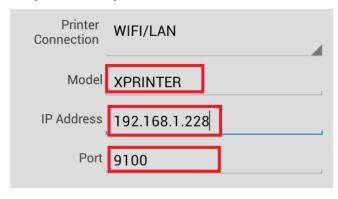

 
5. Make sure the paper width setting correctly; otherwise it will print out garbage content. If printer is 50mm, set paper width to 48mm. If printer is 80mm, set paper width to 72mm. If it not working, reference to your printer manual. The paper width should be multiple of eight.



6. Also make sure the commands are correct.

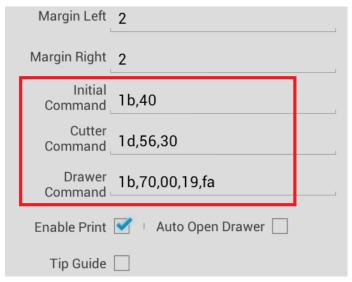


7. Test printer connection, and test print.

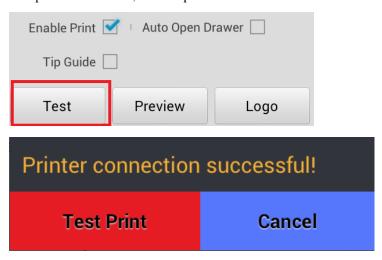


#### 5. ESC/POS PRINTER BLUETOOTH

Bluetooth connection supports most thermal printers with ESC/POS Command.

1. Ensure Bluetooth is enabled and the Bluetooth printer is on.

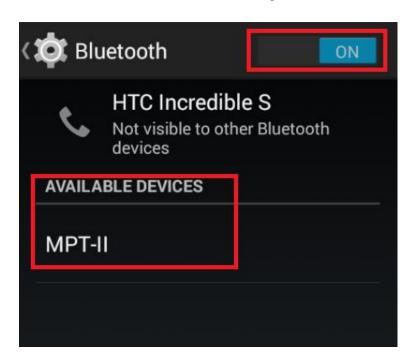


2. Search available devices, and then tap it to pair. Enter the PIN number.

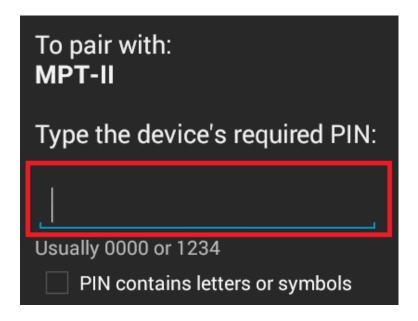

3. In the app, choose ESC/POS Printer Bluetooth.



4. Tap "Scan" and choose the paired printer. Make sure paper width is correct and is in enable status.

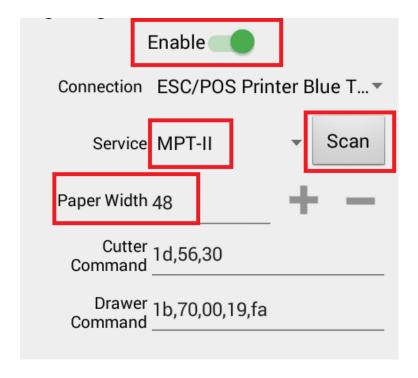


Copyright © 2014 – 2018 Android Application Development Hong Kong

5. Test printer connection, and test print.




#### 6. ESC/POS PRINTER USB

USB connection requires device with Android 3.1 or higher. And make sure your device support USB host.

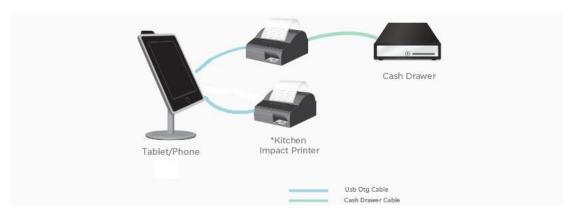

1. In the WnOPOS printer setting, choose "USB".

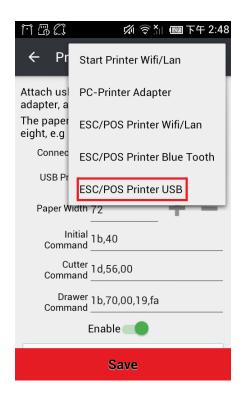


Copyright © 2014 – 2018 Android Application Development Hong Kong

2. Attached usb printer by Micro USB to USB adapter, the app will automatically detect the attached device.



3. Click ok to allow WnOPOs to access the usb device.

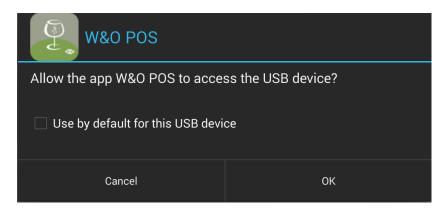

4. Test printer connection, and test print.




#### 7. CASH DRAWER

The cash drawer is connected to printer. W&O POS send command to cash drawer through printer. The default cash drawer command is "1b,70,00,19,fa", if not work, reference your cash drawer user manual.


#### 8. HOW TO RESERVE IP ADDRESS

Sometimes, your router may assign different IP to Wifi/Lan printer or windows PC with W&O POS Adapter when you restart router, printer or computer. In that case, you need to assign local static IP to LAN/Wifi Printer or Windows PC. Here is sample of how to assign static IP in TP-Link.


Open your browser and input your IP Address <a href="http://192.168.0.1">http://192.168.0.1</a> to access Router Admin Portal. Then input user and password to login.

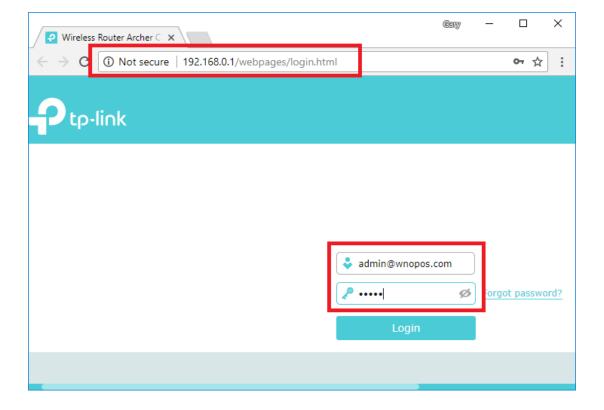

2. Go to Advanced > DHCP Server > Address Reservation, click add

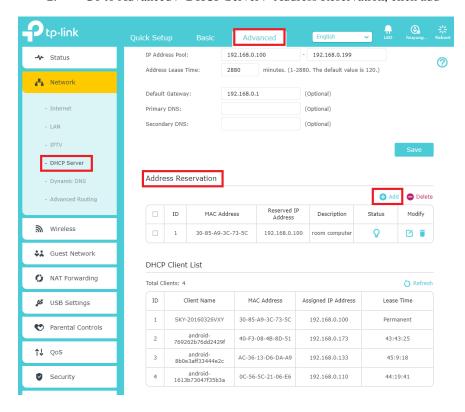


3. On the Address Reservation tab, input Mac Address, IP Address and Description from the DHCP Client List. After input those information, click save.

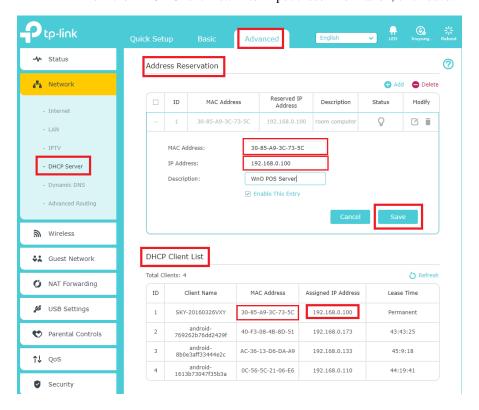


Copyright © 2014 – 2018 Android Application Development Hong Kong

4. You will see the IP Address of Windows PC is reserved on the list.

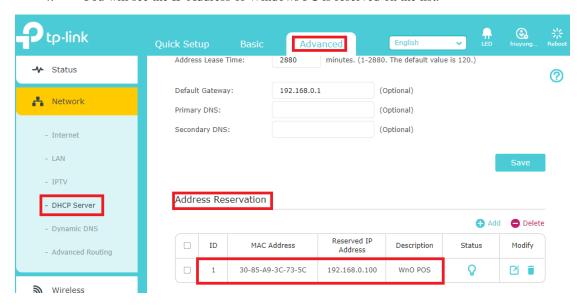

5. You can reboot the router to activate the setting immediately.

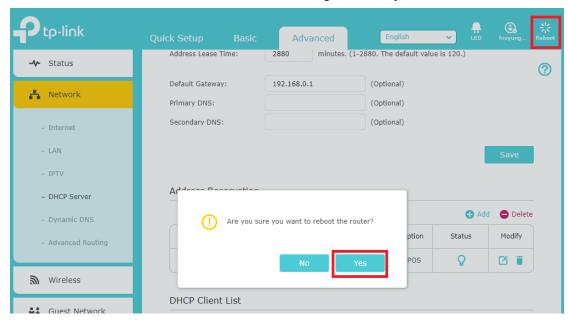


#### 9. PROBLEM & SOLUTION

How to find printer IP if you using Wifi/Lan connection?
 Verify printer IP by print out self –test (switch on printer with holding the "FEED" button)

# Selftest


Version 90mm/s Speed Interface: Ethernet (100M) Protocols : TCP/IP EthernetID: 00-DC-7E-67-6D-58 IP address: 192.168.1.228 Netmask : 255.255.255.0 NetGateway: 192.168.1.1 Avoid lost Doc Default code page: Page0 Print Density : Light Chinese character: Yes Image NV Download: Yes : 2012/06/15 Modify date

2. How to change printer IP if you using wifi/lan connection? Setup printer IP by printer manufactory software.

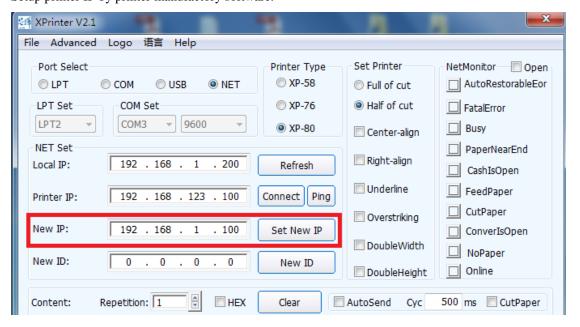

3. Sometimes, your router may assign different IP to Wifi/Lan printer or W&O POS Adapter when you restart router, printer or computer. In that case, you need to assign local static IP to LAN/Wifi Printer or W&O POS Adapter. Here is sample of how to assign static IP in D-Link.

4. When you are using W&O POS printer adapter, it cannot print long bill and only print out part of it. Check your printer driver setting; and make sure the paper size is correct.

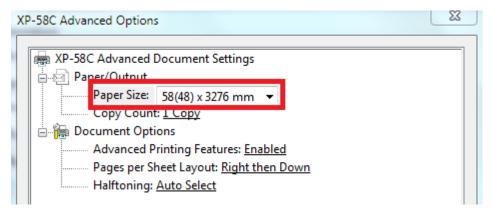

# End